HTMAN HM220i QUICK START GUIDE







Press the ON button once to switch on. To power OFF: press and hold Power button until the red led comes on or screen turns off. HM200i will power off automatically after 30s.



After less than 1s HM220i is ready to use and light will flash until HM220i is switched off.

TURN ON PAIRING




Press '6' on the keypad to select pairing settings. Press ENTER on the keypad to turn pairing on. Ensure that the top line now reads 'Bluetooth=ON". Press F1 to exit the menu.



Once in the tool setting screen, the following functions are accessible; press ENTER to toggle pairing ON/OFF, press F2 to activate discovery mode, press F1 to exit the menu.

OPEN AND START APP

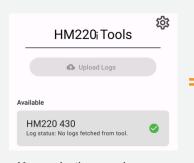

After opening the app, make sure you can see the correct tool and click on it.



From there you can tap on TOOL SETTINGS to adjust tool or manage logs as shown below.

SET LOG LENGTH

Use default length:



HM220i is ready to use, proceed to step 8.

Use predefined/custom lengths: Predefined Lengths

Length 1	Name 1	
5.20	LogSAW	
Length 2 ——	Name 2	
5.30	LogLVL	

Press PREDEFINED LENGTHS on the Tool Settings Page. Select lengths to be modified, key in new values and names, click SAVE.

HITMAN HM22

QUICK START GUIDE




SET SPEED GRADES AND COLOURS

Use default grades:



HM220i is ready to use, proceed to step 8.

Use custom grades:

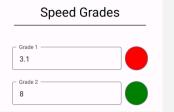

Tap SPEED GRADES in the Tool Settings menu. Select grades to be modified, key in new values. Select coloured circles, choose new colours, tap SAVE.

SET COMPARTMENT NUMBERS

Use default number:



HM220i is ready to use, proceed to step 8.

Use custom numbers:

Compartme	ent & Stand
Compartment —	
12	
C Stand	
Stallu	
2	

Tap on COMPARTMENT & STAND in the Tool Settings menu. Select compartments to be modified, key in new values, tap SAVE.

DETERMINE SYSTEM SETTINGS

Use default settings:



HM220i is ready to use. proceed to step 8.

Use custom settings:

System		
- Max Velocity		
4001		
- Confidence Threshold		
20		
- Adaptive MV Threshold		
19		

Tap on SYSTEM in the Tool Settings menu. Select components to be modified, key in new values, tap SAVE. See User Guide explanation of Max Velocity, Confidence, and Adaptive MV.

TAKE A MEASUREMENT



Press HM220i firmly against end of log until prompted to 'HIT' on the display and by the 'beep'.

NOTE: Release and repeat if 'REHIT' appears on the display.




Hit the end of the log with the hammer.



HTMAN HM220i QUICK START GUIDE





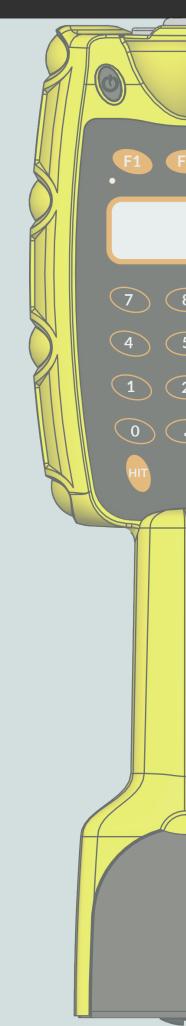

HTMAN HM220

KEY FUNCTIONS





BATTERY REPLACE-

1. CHECK BATTERY

Press F3 to display battery percentage.



2. REMOVE COVER

Unscrew cover with screwdriver provided.




3. REMOVE BATTERIES

Remove batteries by puling on the ribbon.



4. INSERT NEW BATTERIES AND REPLACE COVER

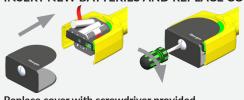

Replace cover with screwdriver provided.

CLEANING & MAINTENANCE

The HM220i tool may be wiped with a clean soft cloth using soap and water, alcohol based cleaners or methylated spirits. Other solvents may damage the unit. The sensor requires regular cleaning to ensure optimal measurement results quality.

IMPORTANT

When cleaning the HM220i tool:

- DO NOT IMMERSE THE TOOL IN WATER OR SOLVENTS.
- DO NOT RUN WATER OR SOLVENT OVER THE TOOL.
- DO NOT USE ANY SHARP OBJECT.